 


PERFORMANCE V700 USER MANUAL

Please read this manual throughly before using and keep it for future reference.

PACKING LIST



Performance V700



Remote (Batteries Not Included)



Carrying Bag



User Manual



AV Cable



HD Cable



Power Cable

NOTICE

Recommended









NOT Recommended













 






FUNCTION OVERVIEW

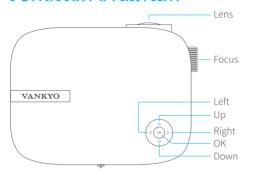

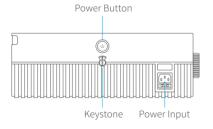




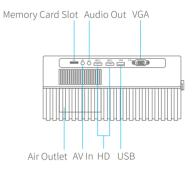

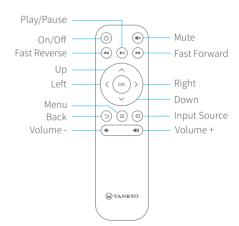

QUICK START

 


Plug the power cord into an outlet.



Take off the lens cover.

Select the correct input

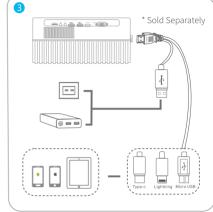


Connect your device to the projector correctly.




Press the **Power Button** to turn on the projector.



 Adjust the keystone and focus ring to get the best image performance.



Adjust the kickstand accordingly.

 



Press the **Power Button** twice to turn off the projector.

INPUT SOURCE

Press 🖨 button on the remote to enter the interface of Input Source.

  
A. Multimedia Connection






 
B. HD Connection






  C. VGA Connection






PROJECTOR CONNECTION

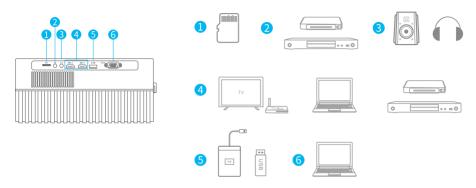

PROJECTION DISTANCE&SIZE

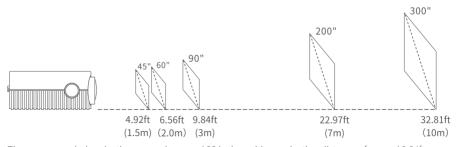

The recommended projection screen is around 90 inches with a projection distance of around 9.84ft. Ambient darkness will improve the clarity of the projected images.

SPECIFICATION

Display Technology	LCD	Light Source	LED
Resolution	Native 1920 x 1080	Input Signal	576i/576P/720i/720P/1080i/1080P
Installation Type	Front/Rear/Ceiling	Aspect Ratio	4:3/16:9/Auto
Focus	Manual	Keystone	±15°
Speaker	10W/4ohm	Power Supply	AC 100-240V, 50/60Hz
Unit Dimension	336.5 x 256 x 125mm (13.2 x 10.1 x 4.9inch)	Unit Net Weight	3.4kg(7.5lb)
Photo Format Supported	BMP/JPG/PNG/GIF	Audio Format Supported	AAC/MP2/MP3/PCM/FLAC/WMA
Video Format Supported	AVI/MP4/MKV/FLV/MOV/ RMVB/3GP/MPEG1/MPEG2/ H.264/XVID	Ports	Memory Card Slot x 1/AV In x 1/ Audio Out x 1/USB Port x 1/ HD In x 2/VGA x 1
Mounting Screw	M4 Metric	Number of Screw	4

TROUBLESHOOTING GUIDE

1. Blurry Image

- * Adjust focus ring/keystone.
- * Projector and screen/wall must be in effective distance.

2. Remote Unresponsive

- * Make sure remote points at IR receiver directly.
- * Do not cover IR receiver.
- * Try a new pair of AAA batteries.

3. Mobile Connection

iOS: Genuine lightning to HDMI cable

Android: Micro USB to HDMI adapter/Type C to HDMI cable

4. Upside Down Images

* Go to Menu > PICTURE > Projection Direction to flip the projection image.

CAUTION



The symbol indicates AC voltage



RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.

This product can be used across EU member states.

VANKYO SUPPORT

North America : support@ivankyo.com
United Kingdom : support.uk@ivankyo.com







@VankyoOfficial



VANKYO